

Installation and Operating Instructions

Stahl 2-Point Automatic Safety Belt Type 1064

Lap belt with mini retractor for buses and individual seats

Approval No. Br3 E4 – R16R-0520008

Read carefully before installing the belt

The 2-point rear seat belt is intended for adults and children over 6 years of age. The safety belt type 1064 is delivered with an Automatic Locking Retractor (ALR), which locks immediately after buckled up (tongue in lock head). This automatic retractor can be installed at any angle/position.

Fixation overview (picture 1):

The belt is fixed at the following two (2) points with the enclosed fixation parts (screws etc.):

Point B - Automatic retractor

Point C - Buckle



The fixation of the automatic retractor or the buckle can be done on the right or left fixation point, depending on space available.

Note:

If your vehicle does not have already a standard fixation point available, please consult a specialist workshop in case of doubts, before drilling the fixation hole (\varnothing 11.5 mm) in the vehicle floor or seat frame etc. The belt must be fixed at this point with delivered fixation parts.




Attention: Do not drill any pipes, cables or chassis parts!

Fixation of the automatic retractor (Figs. 2 and 3)

a) If the standard fixation point is on the vehicle base plate, the fixation thread must be freed and the automatic retractor must be fixed according to Fig. 2 with delivered fixation parts.

b) The automatic retractor must be installed according to Fig. 3 with delivered fixation parts, if the standard fixation point is located on the seat frame.

Fixation of a webbing-/metal strap- or cable buckle according to Fig. 4

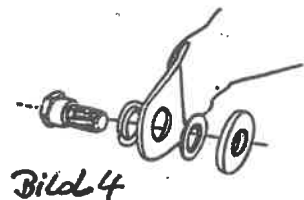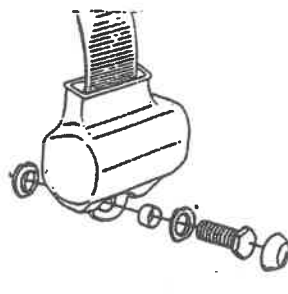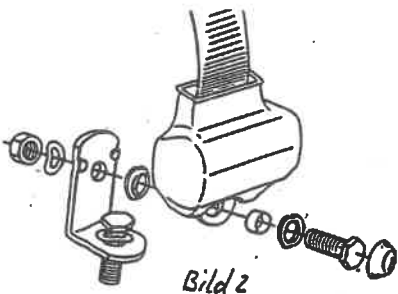

Operating Instructions Type 1064

The automatic retractor gives the passenger body full movement during wearing the seat belt and retracts the webbing when it's not in use.

Buckle up:

To buckle up, sit between points B and C and insert the buckle tongue into the buckle head until it audibly locks. This ensures that the webbing is pulled evenly out of the automatic retractor and runs across the pelvis.

Open:

By pressing the red press button the buckle tongue will be released out of the buckle head and the webbing will be retract into the retractor housing.

Cleaning:

Occasional washing with a sponge, warm water and pure soap keeps the webbing clean. Do not use any chemical cleaning like bleach or dyes, as these will affect the quality of the webbing.

No changes may be made to the safety belt, especially to the automatic retractor, as otherwise the proper functioning of the system cannot be guaranteed.

Important notes:

- In the interest of your safety, we ask you to fasten your seat belt before driving.
- Make sure that the belt is not installed or applied in a twisted position and never scrubs against sharp edges of the seat or the interior of the vehicle.
- Seat belts that are cut, with incomplete seam/stitches, frayed, damaged or from vehicles with an accident must be replaced.
- We recommend having the anchorage points checked in a specialist workshop even after an accident.
- Check occasionally whether the screws are tightened properly.
- The safety belt webbing must fit tight at the body and run in the groin.
- Under no circumstances the webbing should run over the abdomen!!!!!!**

Carl Stahl GmbH&Co.KG Weaving Mill Anhauser Str. 7 D-89542 Herbrechtingen phone: +49 (0)7324-9604-0 e-mail: info@stahl-gurte.de
--